

BARBECUE "GREEN FIRE"



Item: 149508
149621
149591
149607
149614

You should read this user manual carefully before using the appliance.

Bevor Sie das Gerät in Betrieb nehmen, sollten Sie diese Gebrauchsanweisung aufmerksam lesen.

Alvorens de apparatuur in gebruik te nemen dient u deze gebruiksaanwijzing aandachtig te lezen.

Przed uruchomieniem urządzenia należy koniecznie dokładnie przeczytać niniejszą instrukcję obsługi.

Lisez attentivement ce mode d'emploi avant d'utiliser l'appareil .

Prima di utilizzare l'apparecchio in funzione leggere attentamente le istruzioni per l'uso.

Citiți cu atenție prezentul manual de utilizare înainte de folosirea aparatului.

Внимательно прочитайте руководство пользователя перед использованием прибора.

Πρέπει να διαβάσετε αυτές τις οδηγίες χρήσης προσεκτικά πριν χρησιμοποιήσετε τη συσκευή.



Keep these instructions with the appliance.
Diese Gebrauchsanweisung bitte beim Gerät aufbewahren.
Bewaar deze handleiding bij het apparaat.
Zachowaj instrukcję urządzenia
Gardez ces instructions avec cet appareil.
Conservate le istruzioni insieme all'apparecchio.
Păstrați manualul de utilizare alături de aparat.
Хранить руководство вместе с устройством.
Φυλάξτε αυτές τις οδηγίες μαζί με τη συσκευή.



- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.



- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.

- Only use this appliance outdoors.
- Read the instructions before using the appliance.
- **WARNING:** accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas cylinder after use.





HENDI

FOOD SERVICE EQUIPMENT

Steenoven 21, NL-3911 TX Rhenen www.hendi.eu

0063/XX



18/0

STAINLESS STEEL

Item / Article / Utem / Artykuł / Article / Articolo / Articol / Articol / пункт / Столица / Óslo artiklu / Óslo artikla / Tétel / Stavka	149508 Green Fire 2-brander	PIN : 0063AR3273	
Country / Land / Land / Kraj / Pajes / Paese / tará / страна / Xapo / Země / Krajina / Ország / Država	NL/DE/AT/PL/CH	BE/FR/LU/GB/IE/GR/IT	AT/CH
Power / Belastung / Leistung / Moc nominálna / Puissance / Potenza / Putere / Мощност / Ισχύς / Výkon / Výkon / Áramellátás / Snaga	[HS] 12 kW	[HS] 10 kW	[HS] 13 kW
Category / Categorie / Kategorie / Kategorija / Categoría / Categoria / Категорія / категория / Категория / Kategoría / Kategorija / Kategorija	I3P	I3P	I3B/P
Consumption / Verbrauch / Verbruik / Zuzycie / Consommation / Consumo / Consum / потребление / Κατανάλωση / Spotřeba / Spotřeba / Fogyasztás / Potrošnja	809 g/h	695 g/h	946 g/h
Set up / Aulliegung / Inrichting / Przeznaczony na / Concu pour / Configurare / Configurarea / Настройка / Půlžijon / Hodnota regulátoru tlaku / Hodnota regulátoru tlaku / Beizemeelés / Postavljanje	G31-50 mbar	G31-37 mbar	G30-50 mbar
Serial no. / Serien nr. / Serie nr. / Nr. serjiny / N°de série / N° serie / Număr serial / Серийный номер / Арбылдың сирбис / Pořadové číslo / Poradové číslo / Sorozatszám / Serijski br.			



HENDI

FOOD SERVICE EQUIPMENT

Steenoven 21, NL-3911 TX Rhenen www.hendi.eu

0063/XX



18/0

STAINLESS STEEL

Item / Article / Utem / Artykuł / Article / Articolo / Articol / Articol / пункт / Столица / Óslo artiklu / Óslo artikla / Tétel / Stavka	149591 Green Fire 3-brander	PIN : 0063AR3273	
Country / Land / Land / Kraj / Pajes / Paese / tará / страна / Xapo / Země / Krajina / Ország / Država	NL/DE/AT/PL/CH	BE/FR/LU/GB/IE/GR/IT	AT/CH
Power / Belastung / Leistung / Moc nominálna / Puissance / Potenza / Putere / Мощност / Ισχύς / Výkon / Výkon / Áramellátás / Snaga	[HS] 16 kW	[HS] 14 kW	[HS] 20 kW
Category / Categorie / Kategorie / Kategorija / Categoría / Categoria / Категорія / категория / Категория / Kategoría / Kategorija / Kategorija	I3P	I3P	I3B/P
Consumption / Verbrauch / Verbruik / Zuzycie / Consommation / Consumo / Consum / потребление / Κατανάλωση / Spotřeba / Spotřeba / Fogyasztás / Potrošnja	1098 g/h	948 g/h	1386 g/h
Set up / Aulliegung / Inrichting / Przeznaczony na / Concu pour / Configurare / Configurarea / Настройка / Půlžijon / Hodnota regulátoru tlaku / Hodnota regulátoru tlaku / Beizemeelés / Postavljanje	G31-50 mbar	G31-37 mbar	G30-50 mbar
Serial no. / Serien nr. / Serie nr. / Nr. serjiny / N°de série / N° serie / Număr serial / Серийный номер / Арбылдың сирбис / Pořadové číslo / Poradové číslo / Sorozatszám / Serijski br.			



HENDI

FOOD SERVICE EQUIPMENT

Steenoven 21, NL-3911 TX Rhenen www.hendi.eu

0063/XX



18/0

STAINLESS STEEL

Item / Article / Utem / Artykuł / Article / Articolo / Articol / Articol / пункт / Столица / Óslo artiklu / Óslo artikla / Tétel / Stavka	149607 Green Fire 4-brander	PIN : 0063AR3273	
Country / Land / Land / Kraj / Pajes / Paese / tará / страна / Xapo / Země / Krajina / Ország / Država	NL/DE/AT/PL/CH	BE/FR/LU/GB/IE/GR/IT	AT/CH
Power / Belastung / Leistung / Moc nominálna / Puissance / Potenza / Putere / Мощност / Ισχύς / Výkon / Výkon / Áramellátás / Snaga	[HS] 20 kW	[HS] 17 kW	[HS] 23 kW
Category / Categorie / Kategorie / Kategorija / Categoría / Categoria / Категорія / категория / Категория / Kategoría / Kategorija / Kategorija	I3P	I3P	I3B/P
Consumption / Verbrauch / Verbruik / Zuzycie / Consommation / Consumo / Consum / потребление / Κατανάλωση / Spotřeba / Spotřeba / Fogyasztás / Potrošnja	1365 g/h	1177 g/h	1607 g/h
Set up / Aulliegung / Inrichting / Przeznaczony na / Concu pour / Configurare / Configurarea / Настройка / Půlžijon / Hodnota regulátoru tlaku / Hodnota regulátoru tlaku / Beizemeelés / Postavljanje	G31-50 mbar	G31-37 mbar	G30-50 mbar
Serial no. / Serien nr. / Serie nr. / Nr. serjiny / N°de série / N° serie / Număr serial / Серийный номер / Арбылдың сирбис / Pořadové číslo / Poradové číslo / Sorozatszám / Serijski br.			



Dear Client,

To avoid damage due to improper use or storage please read this operation manual carefully. It contains important notes on the installation, safety, operation and care of the appliance. We recommend that you keep this manual and the product warranty together in a safe place for further reference. Please pay special attention to the safety instructions.

Safety regulations

- Only use this appliance outdoors.
- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose it was intended and designed for. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
- Do not try to repair the appliance yourself. This could give rise to life-threatening situations.
- Always keep an eye on the appliance when in use.
- Children do not understand that incorrect use of appliances can be dangerous. Therefore, never let children use appliances without supervision.
- Do not use any extra devices that are not supplied along with the appliance.
- The use of the installation must comply with the applicable national and local regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is intended solely for preparing food.
- Gas and electrical installations should be checked at least once a year.
- Note: the griddle is hot. Let it cool down before touching or removing it.
- We recommend to use only gas cylinders with a capacity of more than 10 kilograms.
- Perform gas cylinder replacement away from potential ignition sources.
- Always place the gas cylinder adjacent to the appliance, not underneath it.
- If a gas leak is detected immediately close the gas valve.
- Note that parts of the barbecue can become very hot. Wear protective clothing (gloves) if you must touch them anyway.
- **Important!** Always use the dripping tray. Not using it will cause heat buildup which may damage the appliance.

EN



Special safety regulations

 
- Necessary changes may only be done by a qualified technician
- Use only the supplied pressure regulator.
- This appliance is only suited for propane gas.
- Check that there are no kinks in the gas hose.
- The length of the gas hose may not exceed 1,5 meters.
- Keep the appliance away from (easily) flammable materials.
- Do not move the gas appliance during use.
- Always close the tap on the gas cylinder if the appliance is no longer being used.
- The user must not change parts of the appliance that are sealed by the manufacturer.
- Install the appliance as level as possible.
- Parts of the barbecue that have been sealed off by the manufacturer may only be maintained by the manufacturer or third parties approved by the manufacturer. Non-compliance may result in dangerous situations and voids warranty.
- **WARNING: some parts of the appliance can become hot. Keep children away from the appliance.**

Intended use

- The device is intended for professional use and can be operated only by qualified personnel.
- The appliance is designed only for cooking a variety of food via heating the suitable cookware. Any other use may lead to damage to the appliance or personal injury.
- Operating the appliance for any other purpose shall be deemed a misuse of the device. The user shall be solely liable for improper use of the device.

EN

Connecting the gas bottle

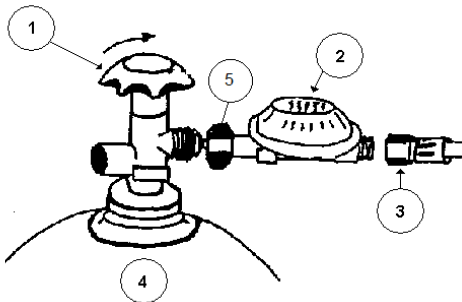

- 1 = Main tap
2 = Pressure regulator
3 = Gas hose
4 = Gas Bottle
5 = Rubber washer

Attach the pressure regulator to the gas bottle using the large brass nut. Always ensure that the rubber-sealing washer is present in the nut. (NB. This rubber washer is not required for UK-type pressure regulators). Tighten the nut well. Note that the nut has a left-hand thread.

Check the connections for leaks using a soap and water solution.

Every time a newly filled gas bottle is connected, a new rubber washer must be fitted. In most cases, your gas supplier will include it with the bottle.



Instructions for use

Ignition:

First place the side panels of the windscreen into the applicable grooves, then attach the rear panel of the windscreen and finally place the elevated grid in the brackets on the side panels of the windscreen.

- Put the grid and griddle on the barbecue.
- Turn the knob to the "big flame" position. Keep the knob pressed and press the ignition button a few times until the burner is burning completely. Keep the knob pressed in for approximately a further 10 seconds. The burner will continue to burn.

 
 
Extinguishing the gas barbecue:

- Turn the knob completely to the right.




Note! After turning off the burners, wait approximately 10 minutes before reigniting the burners.

After turning off the burners, always turn off the main tap on the gas cylinder and the tap on the appliance!


Installation of windscreen and elevated grid

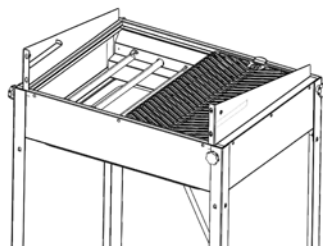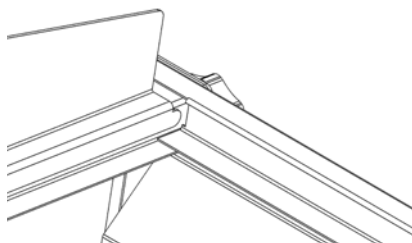

   1. First attach the side panels and make sure they are securely fastened in the groove at the front.

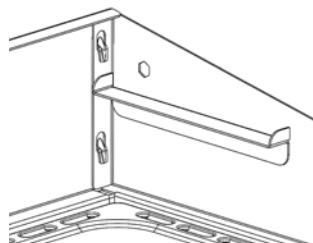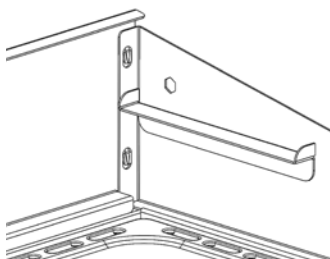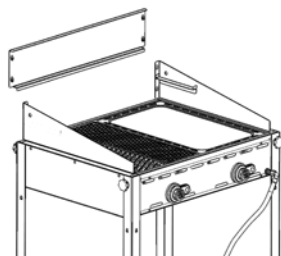

 2. Slide the rear panel in position between the side panels.

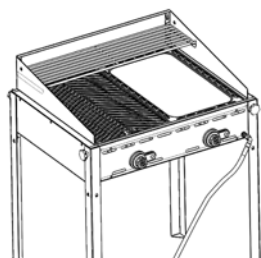

3. Place the elevated grid.



Cleaning and maintenance

- Let the appliance cool down before cleaning
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- The grid and/or baking tray should be cleaned regularly. Use a special barbecue cleaner and follow the instructions on its packaging.
- Clean the ventilation slots (if applicable) with a vacuum cleaner.
- Keep inside after use.
- Let specialised personnel clean the burner at least once a year.
- Never use a high pressure cleaner.
- Maintenance after every use: clean the griddle and elevated grid, clean the dripping tray, grease the grid.

Faults

Fault	Possible cause	Fault	Possible cause
burner fails to ignite at all:	defective ignition	burner does not ignite completely:	gas cylinder (almost) empty
	defective thermocouple		kink in gas hose
	dirty spark plug		gas cylinder valve not entirely open
	defective pressure regulator		clogged jet
	empty gas cylinder		defective valve
	kink in gas hose		
	clogged jet		

If in doubt, please contact your supplier.

Note

- It is recommended to replace the gas hose after 3 or 4 years (see date shown on hose). The gas hose becomes porous after a time. Also check the hose for leaks on a yearly basis at least. Even if the expiration date has not been expired yet, you must check the condition of the hose always. In case of damage/cracks you have to replace the hose immediately. Please make sure that you comply with all local health and safety regulations (e.g. fire code).
- Pressure regulators have a default maximum life span as indicated by the date printed on the regulator, but please note that local health and safety regulations may overrule this.
- Only replace the pressure regulator with one provided by the manufacturer.
- Consult the local regulations, these may differ.
- Always store gas bottles upright, in use as well as when empty.

Accessories

article number	description
328804	Griddle
328811	Grid
502662	Leg
502679	Left panel of windscreen
502686	Right panel of windscreen
502693	Rear panel of windscreen
330589	Elevated grid



Spare parts

article number	description
330265	Burner
152195-302408	Thermocouple 220mm
330227	Spark plug with wire 190mm
153178-306970	Igniter complete with nut
302750	Gas hose 80cm
330203	Gas valve
806005	Dripping tray

Warranty

Any defect affecting the functionality of the appliance which becomes apparent within one year after purchase will be repaired by free repair or replacement provided the appliance has been used and maintained in accordance with the instructions and has not been abused or misused in any way. Your statutory rights are not affected. If the appliance is claimed under warranty, state where and

when it was purchased and include proof of purchase (e.g. receipt).

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

Discarding & Environment

When decommissioning the appliance, the product must not be disposed of with other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point. Failure to follow this rule may be penalized in accordance with applicable regulations on waste disposal. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural re-

sources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local waste collection company. The manufacturers and importers do not take responsibility for recycling, treatment and ecological disposal, either directly or through a public system.

EN

